



cliffswain STRINGING INSTRUCTION

KEY

H1

H1 is "head 1". The numbering starts at the top center of the racquet and is numerically ordered to the outside.

T1

T1 is "throat 1". The numbering starts at the bottom center of the racquet and is numerically ordered to the outside of racquet.



Tie off. There are 4 tie off locations, but note that only 2 are used for the actual string pattern, the other 2 are used for the dampener which is a separate 10" piece of string.

String Pattern
Main String Holes
Tie-off Holes
Method
Length Of String

14 Mains x 19 crosses
H: 1,2,3,4,5,6,7 T: 1,2,3,4,5

Main: T3 Cross: H5

One piece string


38'(total minimum)

10'8"(short side)

Tension
Dampener


30+/-5lbs

Use a separate piece of String to install

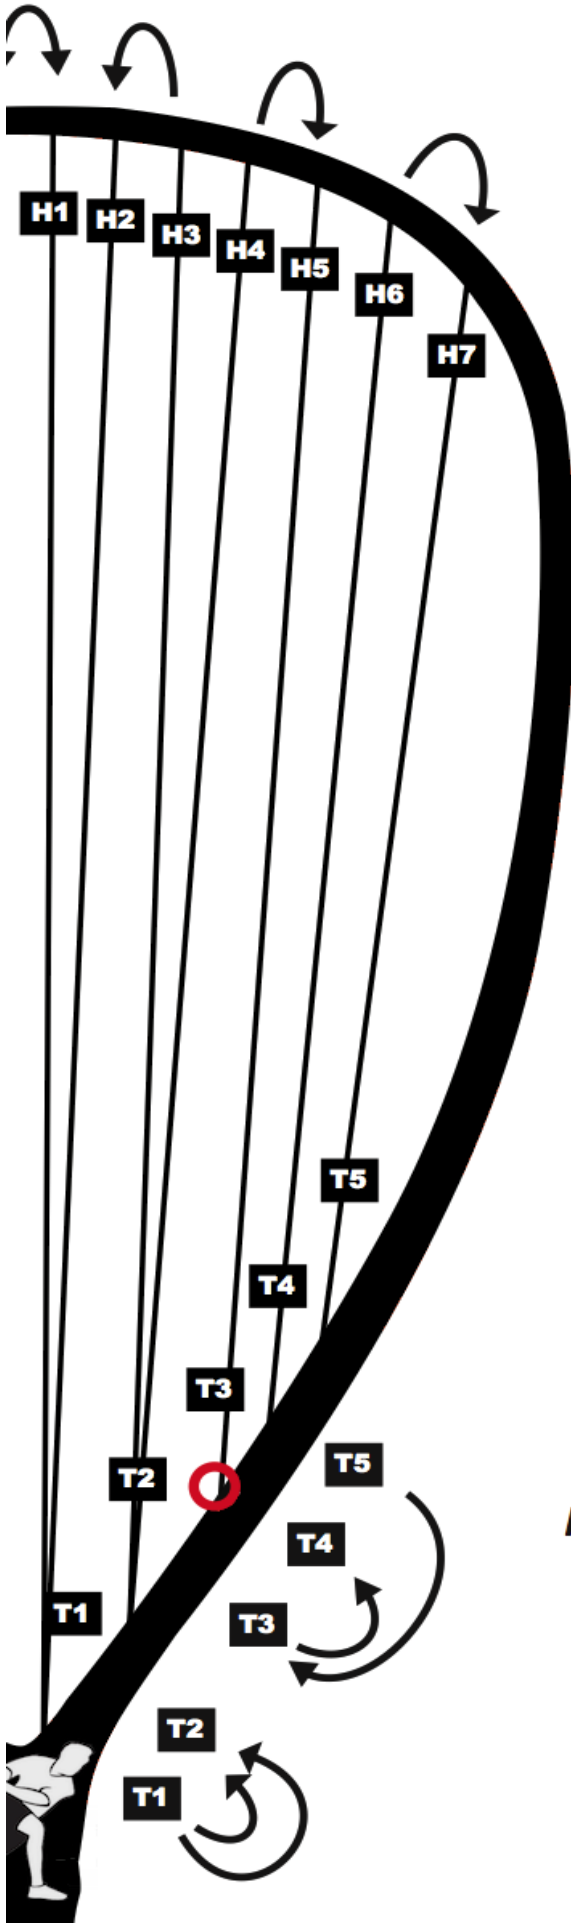

CROSSES TIE OFF (H5)

START CROSSES (T6)

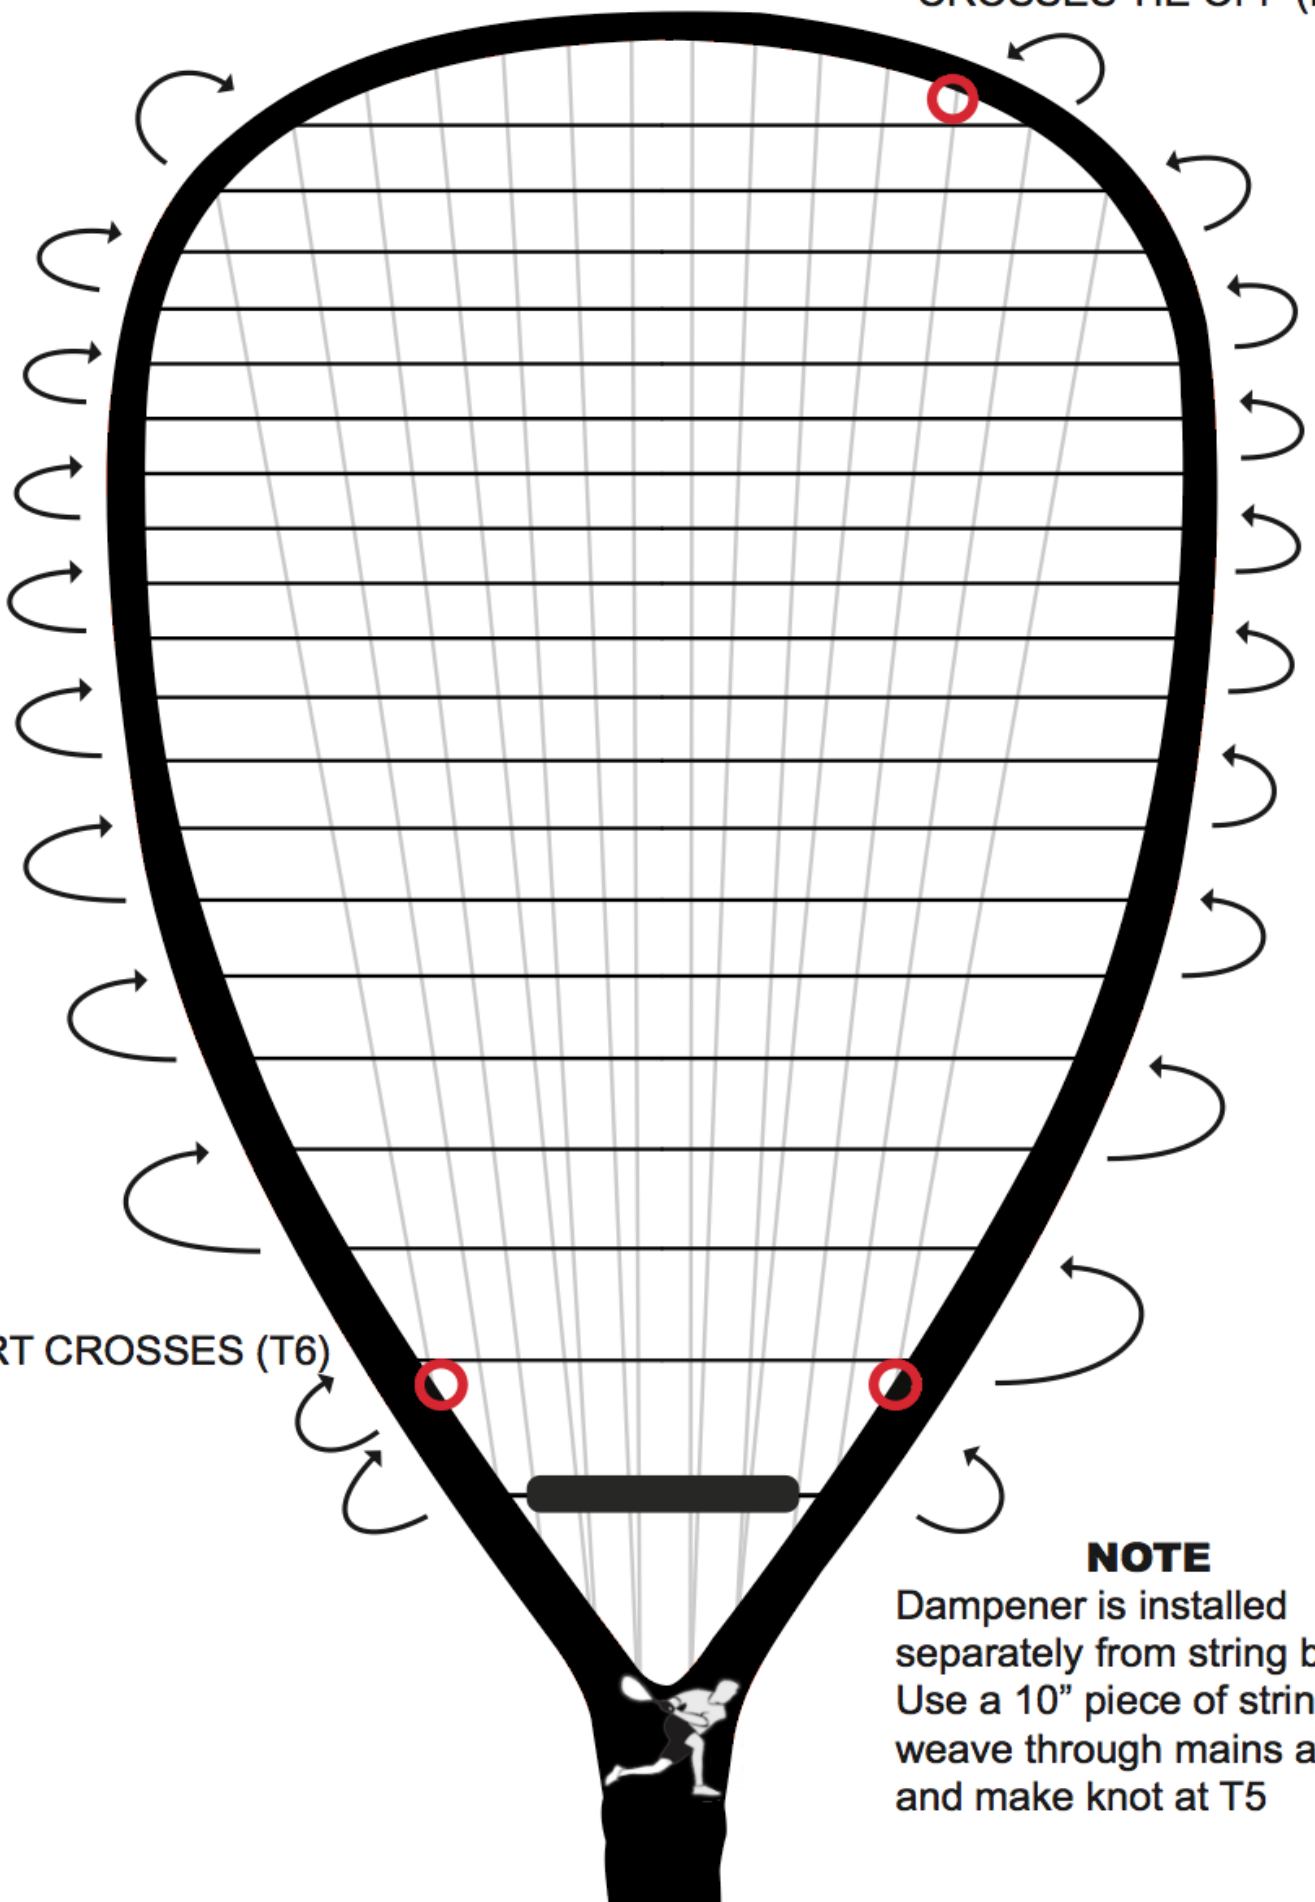

NOTE

Dampener is installed separately from string bed. Use a 10" piece of string to weave through mains at T4 and make knot at T5